


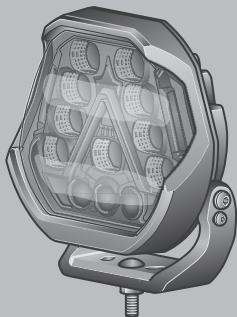

460 821-05 / 07.24



ANTARES HP200 INSTALLATION INSTRUCTION

PRODUCT LIABILITY

- National mounting, fitting and operating regulations must be heeded and kept.
- Please read all the instructions and safety notes included before using the device.
- We reserve the right to make technical and optical modifications within the course of product improvement.
- Only use original spare parts or spare parts approved by HELLA.
- If you have any questions or problems with the installation, please contact HELLA Customer Services, a wholesaler or your garage.
- For installation requirements, please refer to local state road traffic regulations and ADR13.
- Further information is available on our website (www.hella.com/techworld)
- Subject to alteration without notice

2

Explanation symbols



Correct



Incorrect



Location/Position Arrow



Movement Arrow



Warning



Disconnect



Connect



Look/See



Only qualified personnel



High beam





 
Position light



Daytime running light

**Scope of delivery
(package content)**

1F0 358 228-871

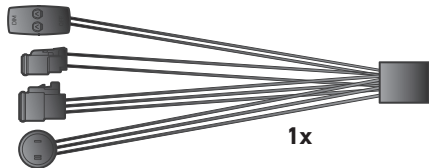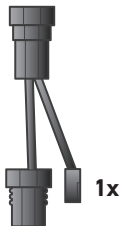

Accessories



8XS 358 198-041



20A 8JS 711 688-821
40A 8JS 711 683-851


 


12V 4RA 033 437-081
24V 4RA 033 437-091



Hella Smart Controller



5DF 980 818-0XX




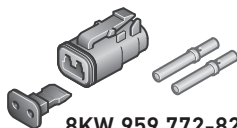



8KW 959 772-821




 
 





8KW 959 772-851

  Installation tools required

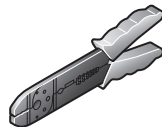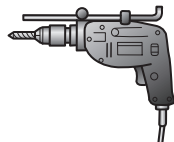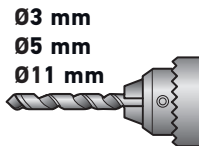


Mounting

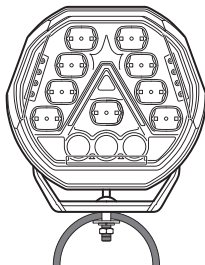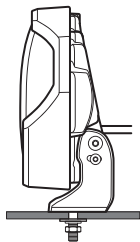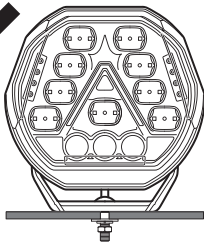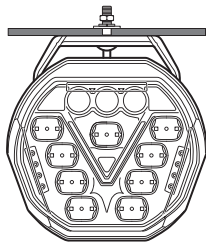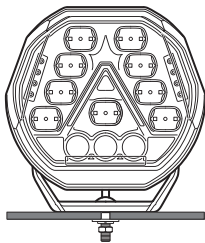

 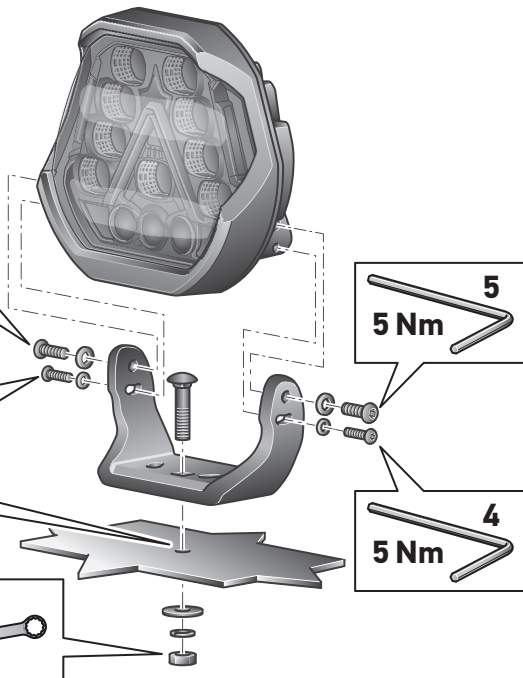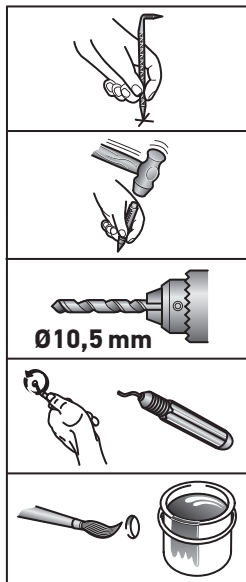

Mounting Accessories

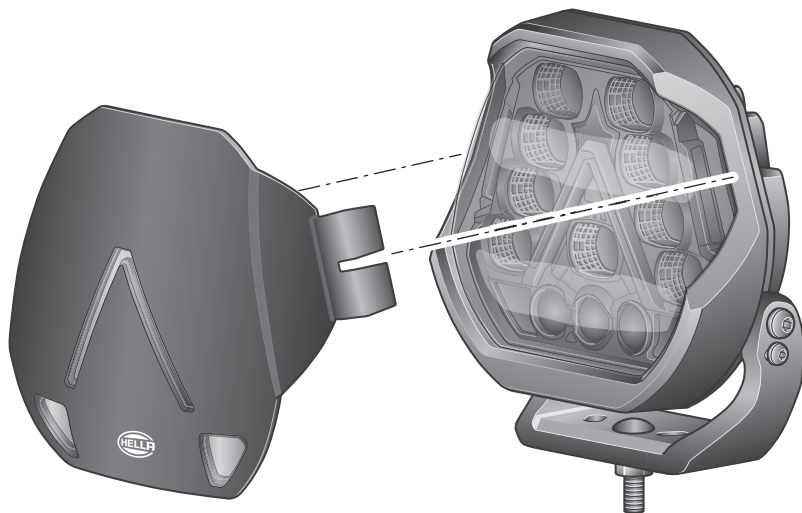


Electrical connection


A



**Example of installation
Wiring harness - Set**

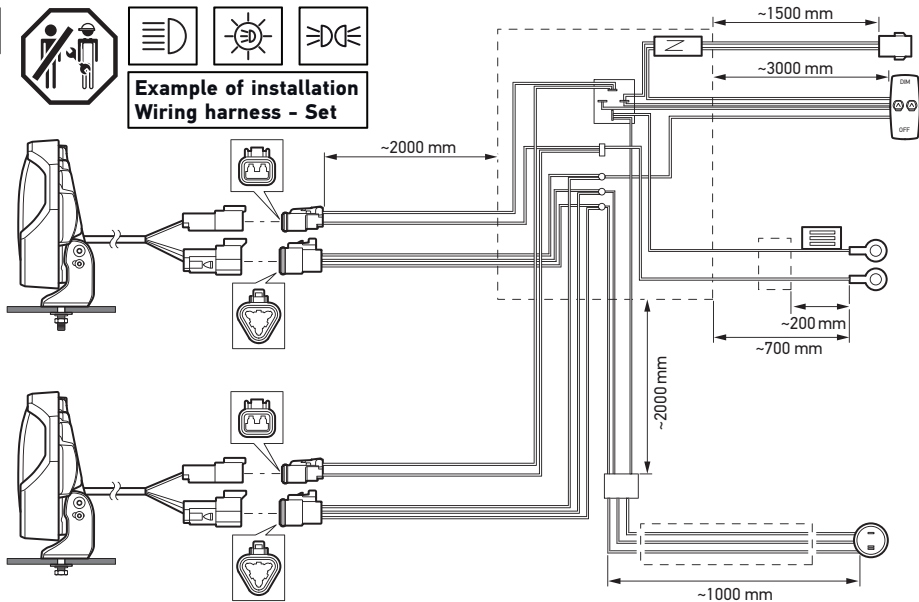

Electrical connection

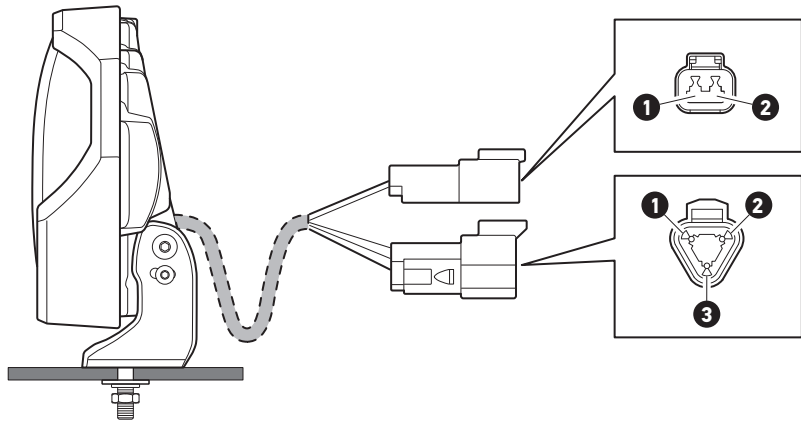

1	HB High Power	<p>1 2</p>
2	31 ⏚ Ground	



1	HB (DIM)	<p>1 2 3</p>
2	DRL Light	
3	PO Light	

Electrical connection

A




Example of installation
Wiring harness - Set

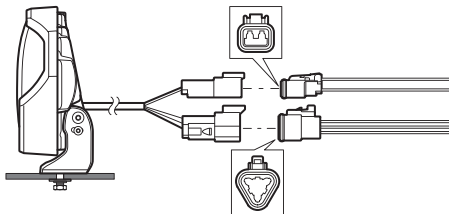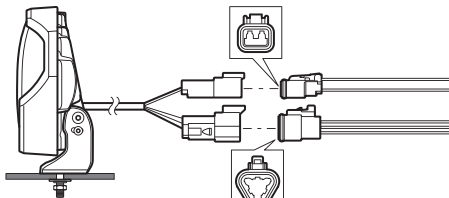

Attention:
On-board Voltage
12V / 24V

 Relay
12V / 24V




12V relay supplied in kit, for 24V supply applications, replace relay and main switch with 24V equivalent components.

Electrical connection


A



**Example of installation
Wiring harness - Set**

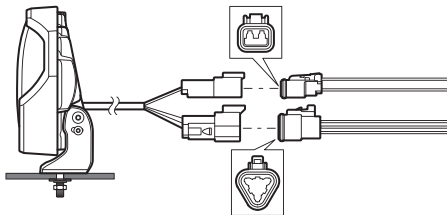

(High Beam - Vehicle)

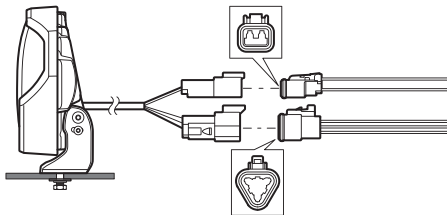



The driving lamps must be able to be lighted only when the main-beam head lamps switch is the "Lamps on" position

Electrical connection


A




Example of installation
Wiring harness - Set

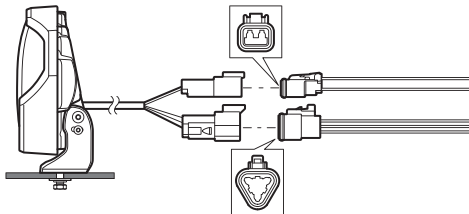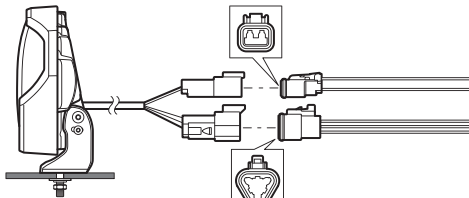

HB Power
HB Power DIM-Mode

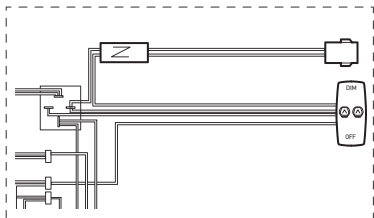

HB HB Power
Power DIM-Mode

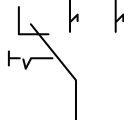



Step 1
HB Power
Step 2
HB Power
DIM-Mode

Electrical connection

A



**Example of installation
Wiring harness - Set**

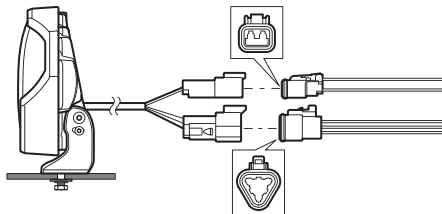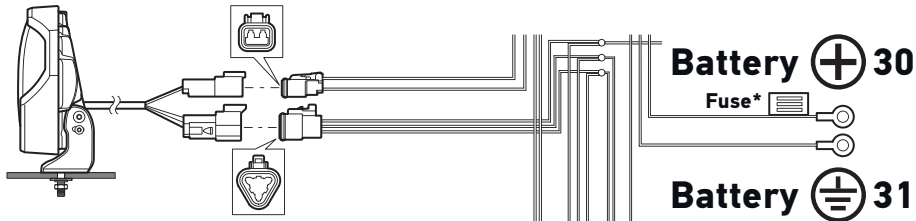



***** The Fuse must be calculated according to the power consumption and the required cable cross-section

Electrical connection

A






**Example of installation
Wiring harness - Set**

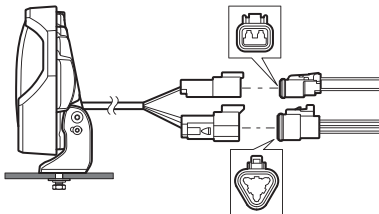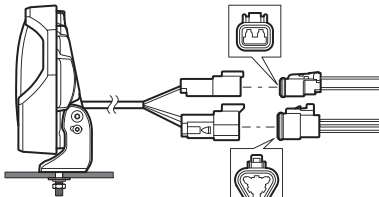

The daytime running lamps operate only when the vehicle lighting is switched off and the ignition is switched on.

**XH-connector
(Male and female)
3 Pin**

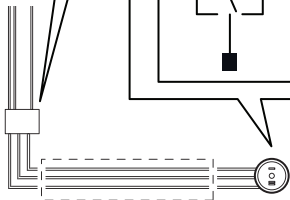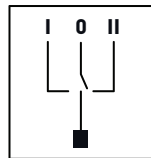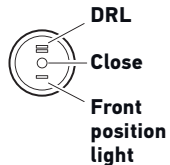


Electrical connection

A



Example of installation

DRL automatic
"Smart controller"

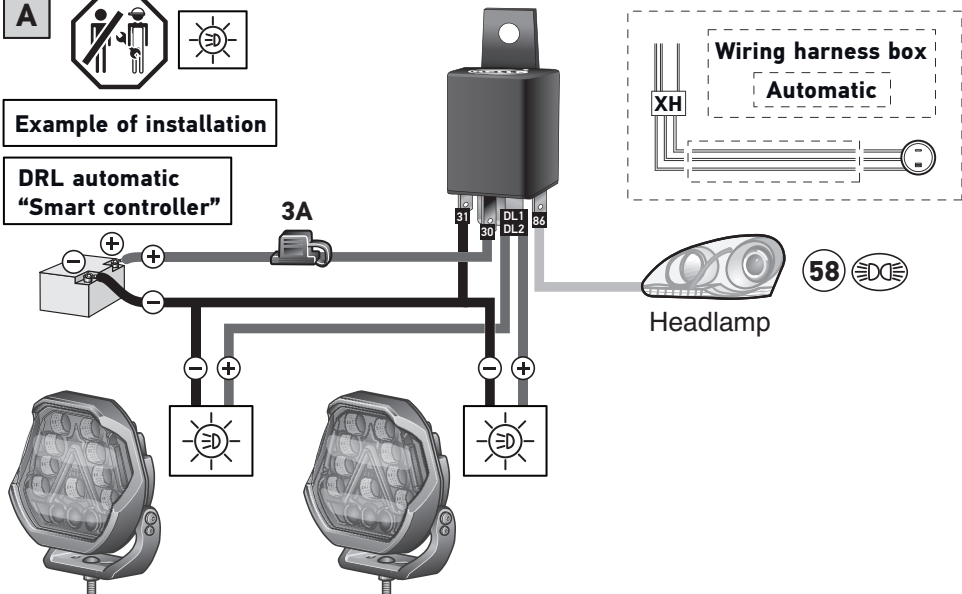

58 

Headlamp




Accessories
(Cable adapter)



H4




HB3

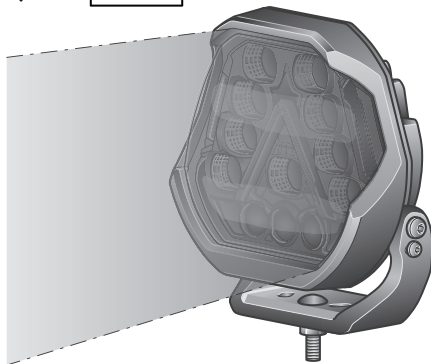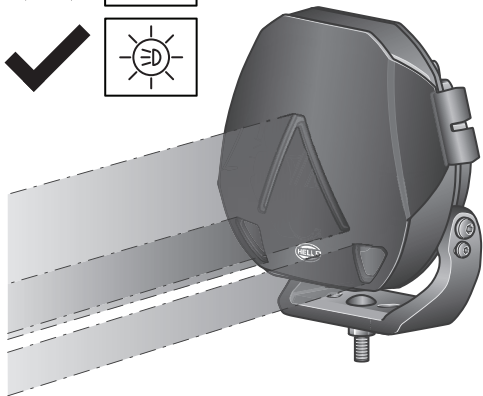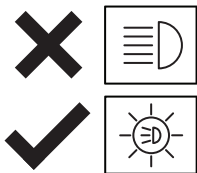

**Remove cover prior to operation, DRL activation excepted.
Once covers are installed onto the lamp, the main beam
is automatically deactivated. DRL and PO still function**

TECHNICAL DATA

Nominal Voltage (Kit)	12 V Wiring harness		
	10-30 Volt	12V	24 V
Input Voltage	10-30 Volt	12V	24 V
Power Consumption		~200W	~172W
High Beam / High Power Current		≤17A	≤7,25A
High Beam / Dim Current		≤10A	≤5A
Daytime Running Light Current		≤0,75A	≤0,36A
Position Light Current		≤0,09A	≤0,05A
Light Colour	white		
Ambient Temperature Range	-40°C → +65°C		
Storage Temperature Range	-40°C → +85°C		
IP Rating	IP69K, IP67		
EMC 	R10(CISPR25 CLASS 3)		

Daytime running light approved in accordance with ADR 76/00, ECE R87



Operation of the light using alternating voltage or clocked direct voltage is not permitted!
 The fuse must be calculated according to the power of the consumer and the required cable cross-section.
 For installation requirements, please refer to local state road traffic regulations and ADR13.
 For 24V supply applications, replace relay and main switch with 24V equivalent components.

Mounting steps: Page 6 – 7

It is however essential that country-specific laws are observed.

Check the lighting system, fasten the connection cables securely.




Have the driving lights adjusted at a specialist garage.

Only correctly adjusted lights provide optimum light.

Check that the lighting system is working perfectly.

A useful tip:


Keep the cover lenses clean. Dirt may absorb up to 80% of the light emitted.

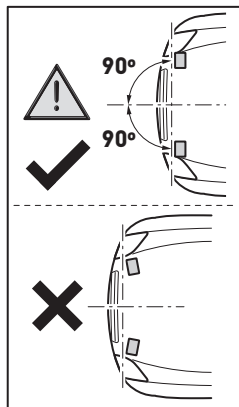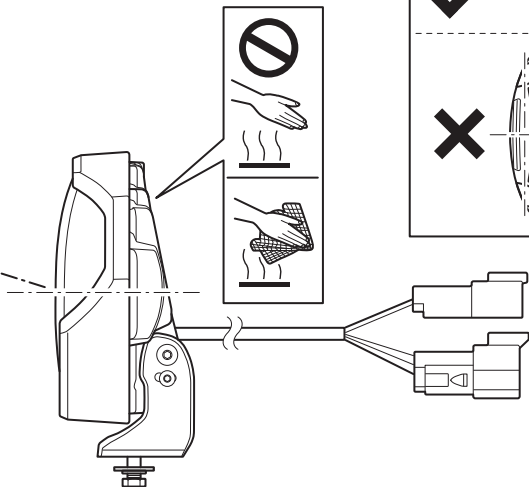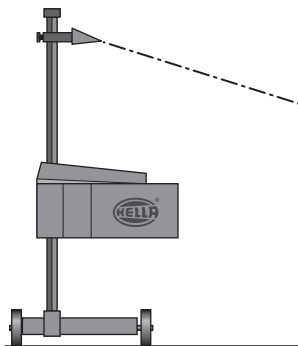



21

Please dispose of the packaging and the product in accordance with the national and regional recycling regulations and laws.

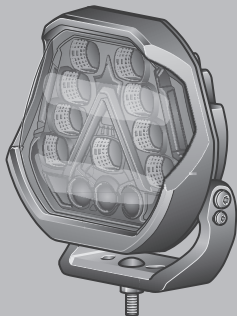

HELLA Australia Pty Ltd

4 Hargrave Place
Mentone, Melbourne
Victoria, 3194
Australia

www.hella.com

© HELLA GmbH & Co. KGaA, Lippstadt
460 821-05 /07.24